



ESPAR HEATER

Your van is equipped with an **Espar Heater** for use when the van is off. Please ensure you have at least a ½ tank of fuel.



Turn on the Heater: (Ensure you have at least a half tank of fuel)

1. Press the center button once to turn on the unit. The green light will light up.
2. Press the center button a second time to turn on the heat.
3. Allow 2 to 10 minutes for the heater to start blowing warm air.
4. Use the blue and red arrows to set the temperature. We recommend setting to 62F
5. The heater will default to a 10 hour timer and will automatically turn off after 10 hours.
6. If the heater does not turn on or errors out. Make sure the heater is not blocked and the exhaust under the van is not blocked also.

Turn off the Heater:

1. Press the center button.
2. The green light will turn off indicating that the heater is off.

Reset Heater:

1. Locate the small reset button on the right side of the controller (blue arrow above).
2. Use a small tipped tool to press the button.
3. Adjust settings in "Maintenance Mode" if needed.



**Still not working?
Call 1-888-222-5520**